



LEGEND

- AC
- AUTOMATIC CUTOUT
- MC
- MANUAL CUTOUT
- PDN
- AIR FLOW SWITCH
- DS
- DISCONNECT SWITCH
- CONTACTOR COIL
- HEATING ELEMENT
- TR
- TRANSFORMER
- CONTACT NORMALLY OPEN
- FUSE

WARNING:
Disconnect all supplies before working on this duct heater

IMPORTANT:
Wire in according with electrical codes
Use copper wire for 90°C minimum

NOTE:
All wiring outside this frame are wiring by others