



**LEGEND**

- AC
- AUTOMATIC CUTOUT
- MC
- MANUAL CUTOUT
- PDN
- AIR FLOW SWITCH
- DS
- DISCONNECT SWITCH
- CONTACTOR COIL
- HEATING ELEMENT
- TR
- TRANSFORMER
- CONTACT NORMALLY OPEN
- FUSE

**WARNING:**  
Disconnect all supplies before working on this duct heater

**IMPORTANT:**  
Wire in according with electrical codes  
Use copper wire for 90°C minimum

**NOTE:**  
All wiring outside this frame are wiring by others