
## **FP OPTION SENSOR INSTALLATION**

Revision History					
#	Description	Revised by	ECN#	Date	
0	Released to Website	0	1226	8/2/07	
1	Detail Installation	EG	1396	6/16/08	

NOTES: One Sensor per Riser

- : Multiple Sensors On Same Fan Switch Wired in Parallel
- : Sensor may be installed on inside or outside of quickseal. When installed in riser, install as shown for sensor access from hood. When installed in duct, install on opposite side of quickseal, or as shown with access door for cleanability.

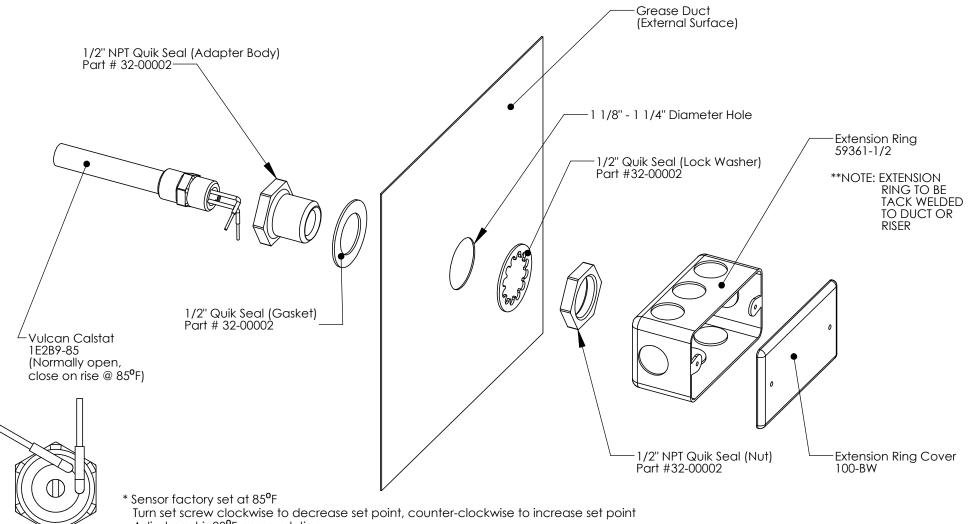

Adjustment is 90°F per revolution
-----------------------------------

Material: N/A	Part Number: N/A	Unless Otherwize Specified
Blank Size: N/A x N/A	MACOLA Number: N/A	Dimensions are in Inches.
Weight: N/A lbs	Drawing Name: Sensor_Install	Standard Tolerances are:
	Drawn By: EG	Fractions: ±1/16 Decimal: .XX±.05
	Parent Assembly: FP Option	.XXX ±.015 Angles: ±1°
	Sheet: 3 of 6	Angles: ±1